

LupoMarshall®

UPUTSTVO ZA UPOTREBU

SET ZA KOSU

Model A3054

VAŽNA BEZBEDNOSNA UPUTSTVA: PAŽLJIVO PROČITAJTE I ČUVAJTE ZA BUDUĆU UPOTREBU.

OPŠTA UPUTSTVA O BEZBEZNOSTI

- Pažljivo pročitajte Uputstva pre korišćenja ovog aparata.
- Ovaj aparat ima ugrađen termalni prekidač koji se automatski gasi kada se pregreje. Čim se ohladi, aparat će nastaviti da ispravno funkcioniše.

NAPOMENA:

Ponavljanje gore navedenog može dovesti do oštećenja.

- Isključite aparat i izvucite utikač iz napajanja kada ga ne koristite duži period.
- Ne rukujte aparatom vlažnim ili mokrim rukama.
- Ukoliko aparat postane vlažan ili mokar, odmah izvucite utikač iz napajanja.
- Ni pod kakvim okolnostima se aparat ne sme staviti u vodu ili drugu tečnost, niti biti u kontaktu sa tečnošću.
- Popravljanje aparata treba poveriti isključivo kvalifikovanom tehničaru.
- Ne stavljamte aparat na bilo koju toplotno osjetljivu površinu kada je vruć ili kada je uključen u struju.
- Sačuvajte ova uputstva na sigurnom mestu za buduću upotrebu

KORIŠĆENJE APARATA

Promena dodatnog pribora

- Sav dodatni pribor ima znak (strelice)
- Usmerite oznaku strelice ka dugmetu za otpuštanje pribora na telu glavnog uređaja
- Pritisnite na dole ka telu glavnog uređaja. Čućete "klik" što potvrđuje da je pribor sada zaključan u poziciji.
- Pritisnite dugme za otpuštanje dodatnog pribora na aparatu kako bi otpustili pribor.

Kontrole na prekidaču

0 = Pozicija isključenog uređaja

1 = Niska: mlaka temperatura

(Smanjen protok vazduha)

2 = Visoka: topla temperatura

(Maksimalan protok vazduha)

ČIŠĆENJE APARATA

Pre čišćenja, isključite aparat i izvucite utikač iz napajanja

- Zaštите aparat od prašine i ulja.
- Uklonite prašinu i dlake iz usisne rešetke malom četkicom.
- Očistite aparat blago vlažnom krpom i osušite ga suvom krpom.

ČUVANJE

Kada ga ne koristite, isključite aparat i čuvajte ga na sigurnom, suvom mestu i van domaćaja dece.

SPECIFIKACIJA

NOMINALNI NAPON	220-240V
NOMINALNA FREKVENCIJA	50HZ/60HZ
NOMINALNA SNAGA	1000W

LupoMarshall®

INSTRUCTION MANUAL

HAIR SET

Model A3054

GENERAL SAFETY INSTRUCTIONS

- Before using the Hair Styler Set, please read the Instruction Manual carefully.
- Please keep these instructions; the guarantee certificate; the sales receipt; and if possible the gift box with the inner packaging.
- This Hair Styler Set has a built in thermal switch that will automatically cut off when heated. Once cooled down, the Hair Styler Set will resume proper functioning.

NOTE: Repetition of the above can result in damage.

- Turn off the Hair Styler Set and remove the mains plug from the mains supply when not in use for a long period.
- Do not use the Hair Styler Set with damp or wet hands.
- Should the Hair Styler Set become moist or wet, remove the mains plug from the mains supply immediately.
- Under no circumstances must the Hair Styler set be placed in water or other liquid, or come into contact with liquid.
- Repairs to this Hair Styler Set should only be performed by a qualified technician.
- Do not place the heated Hair Styler Set on any heat sensitive surface when hot or when plugged in.
- Keep these instructions in a safe place for future reference.

Important safety instructions: read carefully and keep for future reference.

USING THE HAIR STYLER

To Change Accessories

- In all accessories have an arrow mark
- Point the Arrow mark to the Accessory Release Button on the Main Body
- Push downward to the Main Body. A click sound confirms that the accessory is now locked in position.
- Push the Accessory Release Button on the Hair Styler to remove an accessory.

Switch Controls

0 = OFF Position

1 = Low : Temperature Mild (Reduced airflow)

2 = High : Temperature Hot (Maximum airflow)

CLEANING THE HAIR STYLER SET

Before cleaning, switch off the Hair Styler Set and remove the mains plug from the mains supply.

- Protect the Hair Styler Set from dust and oil.
- Remove dust and hair from the intake grill with a small brush.
- Clean the Hair Styler Set with a slightly damp cloth and dry with a dry cloth.

STORAGE

When not in use, disconnect the Hair Styler Set and store in a safe, dry place, out of reach of children.

SPECIFICATIONS

RATED VOLTAGE	220-240V
RATED FREQUENCY	50HZ/60HZ
RATED POWER	1000W